


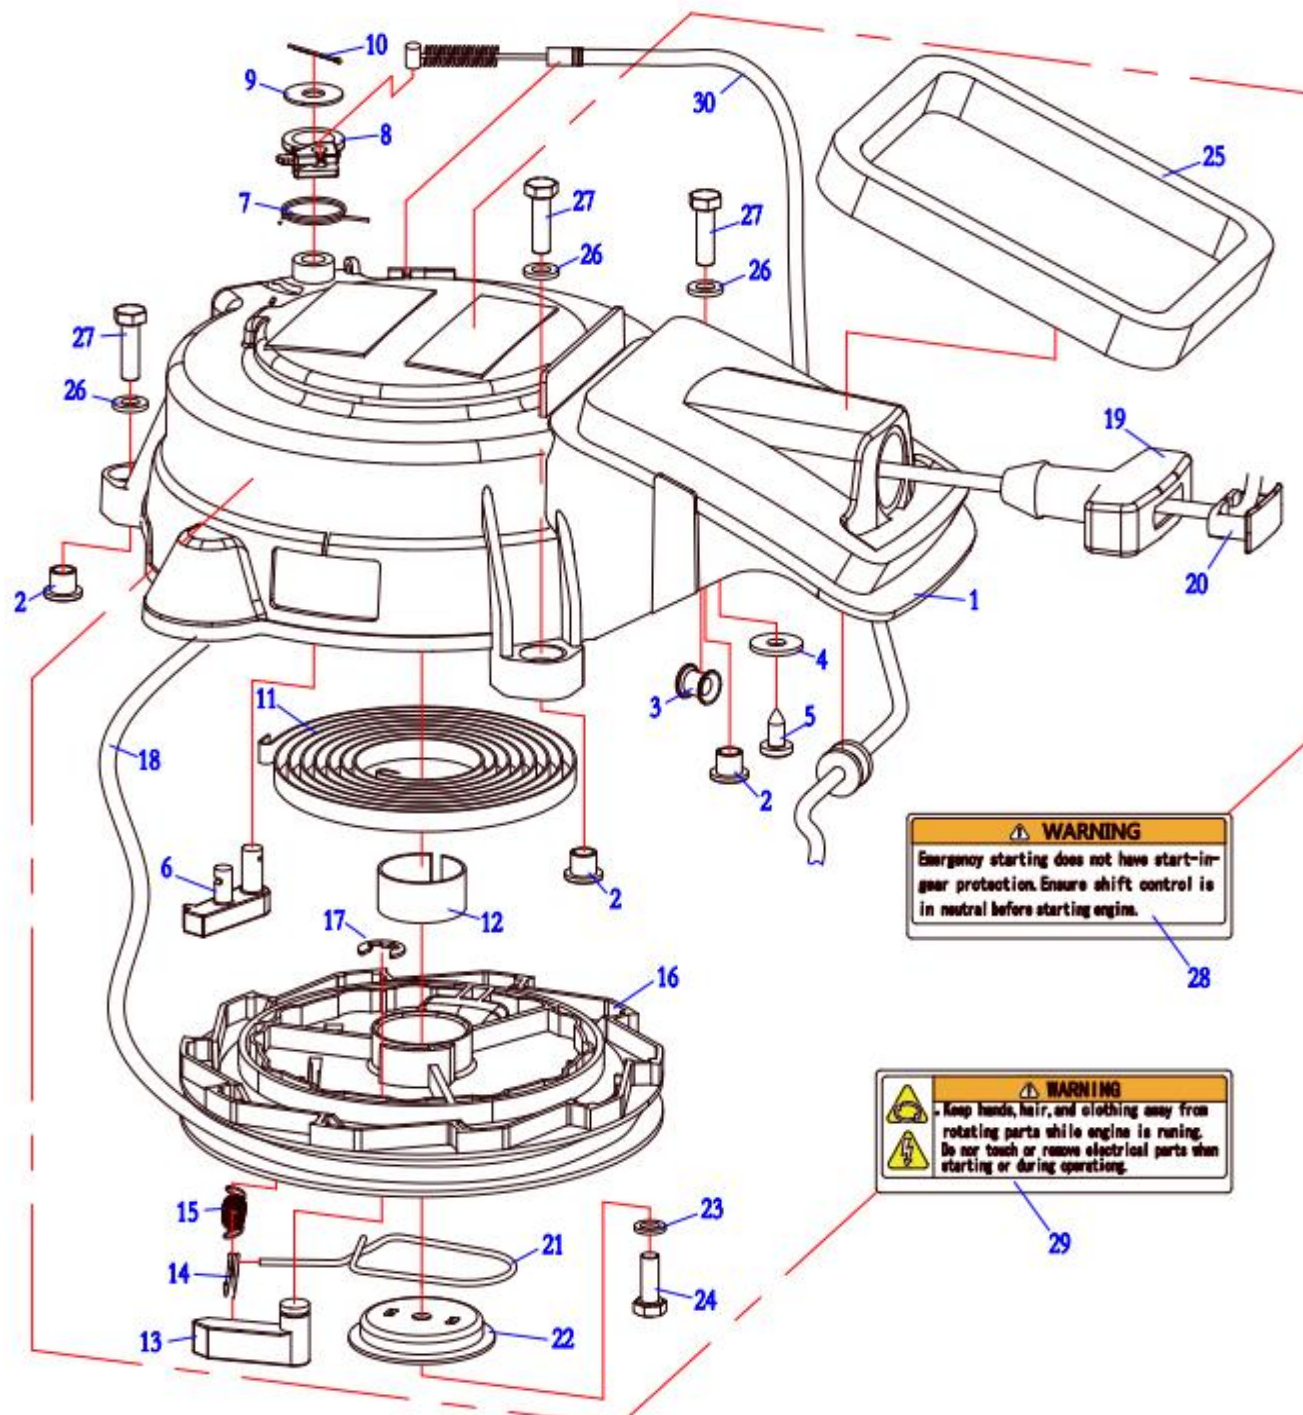


WARNING
Emergency starting does not have start-in-gear protection. Ensure shift control is in neutral before starting engine.

WARNING
Keep hands, hair, and clothing away from rotating parts while engine is running. Do not touch or remove electrical parts when starting or during operations.

Starter cover Assembly


NO.	part No.	Products name	QT
1	T15-01.01.02.00	Starter cover component	1
2	T15-01.01.00.03	Starter cover gasket pipe	3
3	T15-01.01.00.06	Starter rope reel	1
4	GB/T96	Big washer 5	1
5	GB/T845	Cross recessed pan head tapping screwsST5.5*12	1
6	T15-01.01.00.14	Brake	1
7	T15-01.01.00.15	Brake torsion spring	1
8	T15-01.01.00.16	Wire retaining ring	1
9	T15-01.01.00.13	Big washer	1
10	GB/T91	Cotter Ø1.2*20	1
11	T15-01.01.00.19	Vortex spring	1
12	T15-01.01.00.18	Starting wheel bushing	1
13	T15-01.01.00.10	Actuating arm	1
14	T15-01.01.00.12	Actuating arm spring	1
15	T15-01.01.00.11	Return spring	1
16	T15-01.01.00.17	Starting wheel	1
17	GB/T896	Split washer 8	1
18	T15-01.01.00.09	Starter rope Ø5*2000	1
19	T15-01.01.01.00	Starting handle components	1
20	T15-01.01.00.05	Starting handle cover	1
21	T15-01.01.00.07	Press plate clip clutch	1
22	T15-01.01.00.08	Starting pressure plate	1
23	GB/T97.1	flat pad 6	1
24	GB/T5783	Hexagon bolt M6*16	1
25	T15-01.01.00.04	Starter cover damping ring	1
26	GB/T97.1	Plain washers 6	3
27	GB/T5783	Hexagon bolt M6*20	3
28	T15-01.01.00.01	Starter cover sticker(up)	1
29	T15-01.01.00.02	Starter cover sticker(side)	1
30	T15-01.04.02.00	Wire stopper component	1



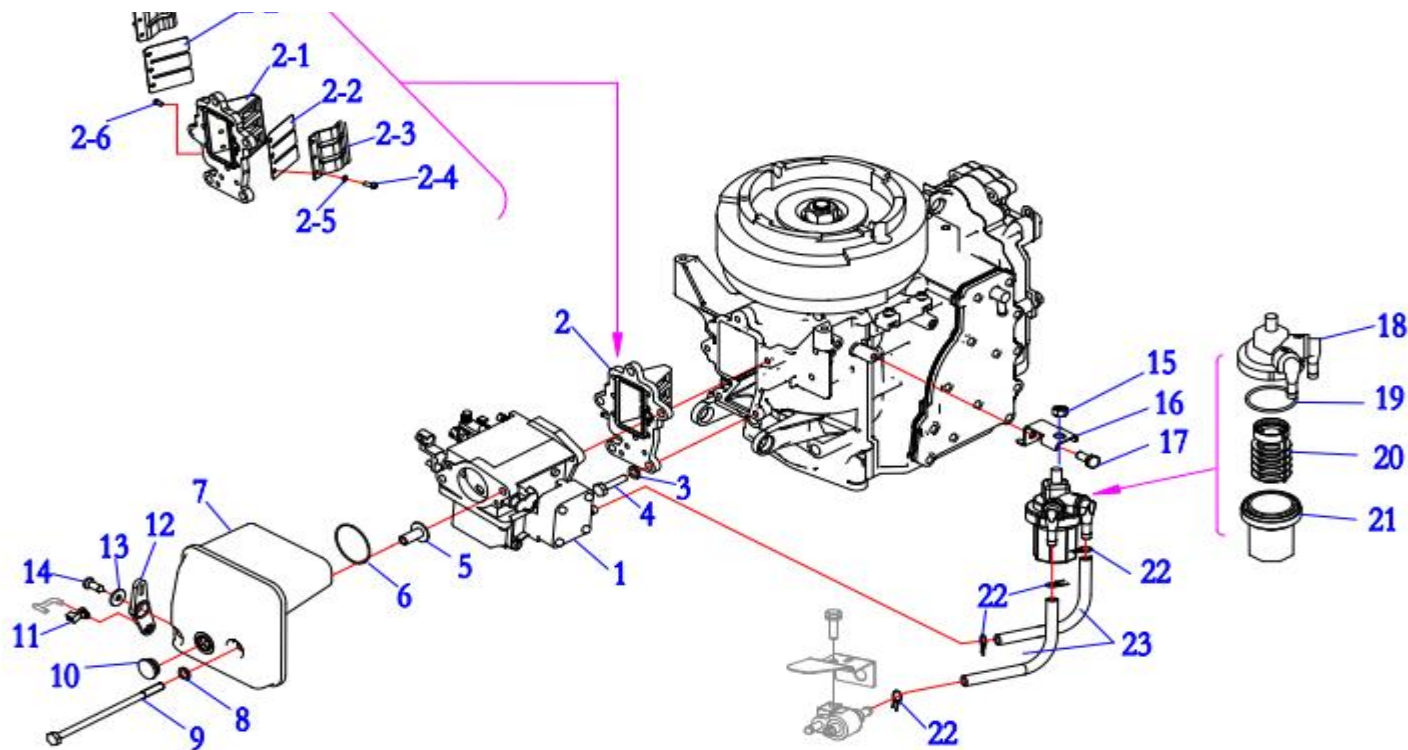

Air intake fuel system parts


NO.	part No.	Products name	QT
1	T15-01.02.02.00	Carburetor components	1
2	T15-01.02.05.00	Inlet valve components	1
2-1	T15-01.02.05.02	Rubber inlet valve seat belt	1
2-2	T15-01.02.05.03	Inlet valve piece	2
2-3	T15-01.02.05.04	Valve plate clamp	2
2-4	GB/T823	Cross recessed small pan head screw M3*6	6
2-5	GB/T93	Spring washer 3	6
2-6	T15-01.02.05.05	Tracheal circular connector	1
3	GB/T97.1	flat pad 6	3
4	GB/T5783	Hexagonal head bolt M6*20	3
5	T15-01.02.00.01	Shoulder gasket tube	2

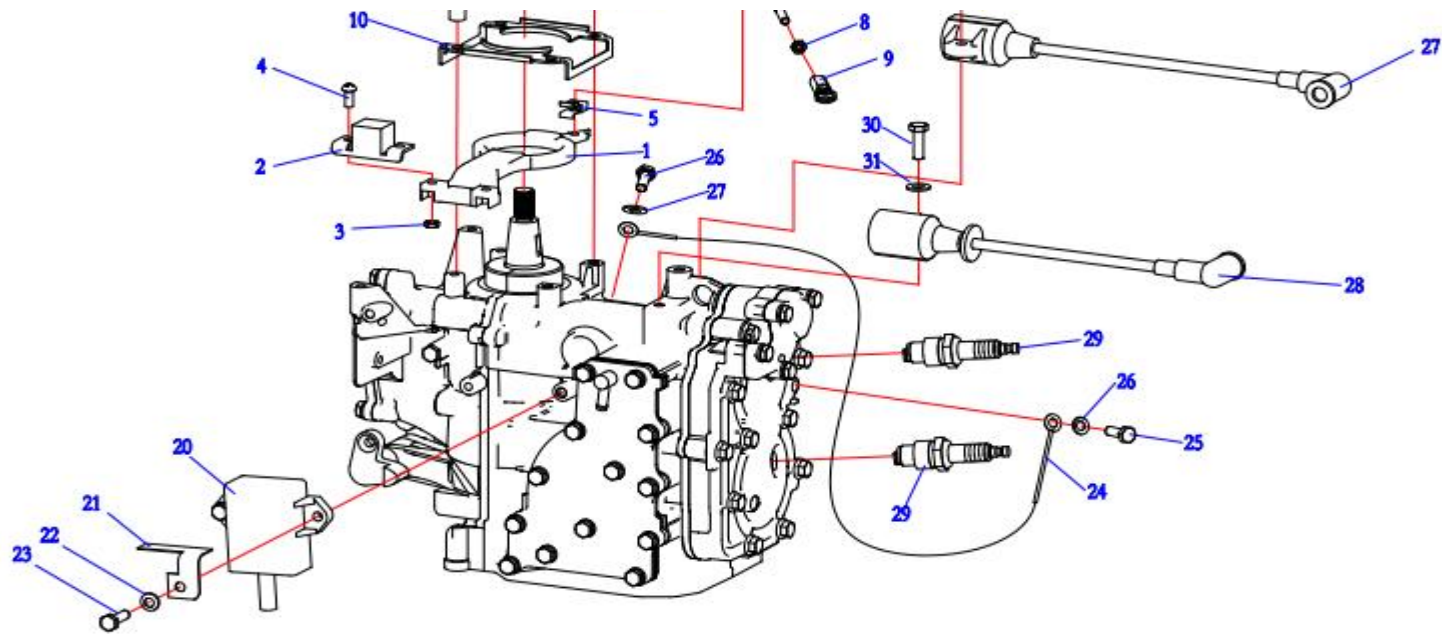

Electrical system unit

NO.	part No.	Products name	QT
1	T15-01.03.00.10	Fitting seat	1
2	T15-01.03.07.00	The trigger component	1
3	GB/T6172.1	Hexagon thin nut	2
4	GB/T823	Cross recessed small pan head screwM5	2
5	T15-01.03.00.07	Positioning card	1
6	T15-01.03.00.08	L-type screw	1
7	T15-01.03.00.13	B-type cotterØ1*14	1
8	GB/T6172.1	Hexagon thin nutM5	1
9	T15-01.03.00.09	Linkage joint	1
10	T15-01.03.00.05	Dead plate	1
11	T15-01.03.00.04	Gasket pipe	2
12	T15-01.03.06.00	Charging coil components	1
13	GB/T5789	Hexagon bolt with flangeM6*35	2
14	T15-01.03.00.14	Pipe bed A	2
15	T15-01.03.08.00	Lighting coil components	1
16	GB/T5789	Hexagon bolt with flangeM6*40	2
17	T15-01.03.05.00	Flywheel set	1
18	T15-01.03.00.03	Flywheel gasket	1


19	T15-01.03.00.02	Fly wheel nut	1
20	T15-01.03.03.00	Igniter controller component	1
21	T15-01.03.04.00	Wire fixation component	1
22	GB/T97.1	flat pad 6	2
23	GB/5783	Hexagon bolt M6*20	2
24	T15-01.06.02.00	Earth stranded wire component	1
25	GB/T5783	Hexagon bolt M6*12	2
26	GB/T97.1	flat pad 6	2
27	T15-01.03.01.00	Ignitor coil component A	1
28	T15-01.03.02.00	Ignitor coil component B	1
29	T15-01.03.00.06	Spark plug BR7HS	2
30	GB/5783	Hexagon bolt M6*20	2
31	GB/T97.1	flat pad 6	2

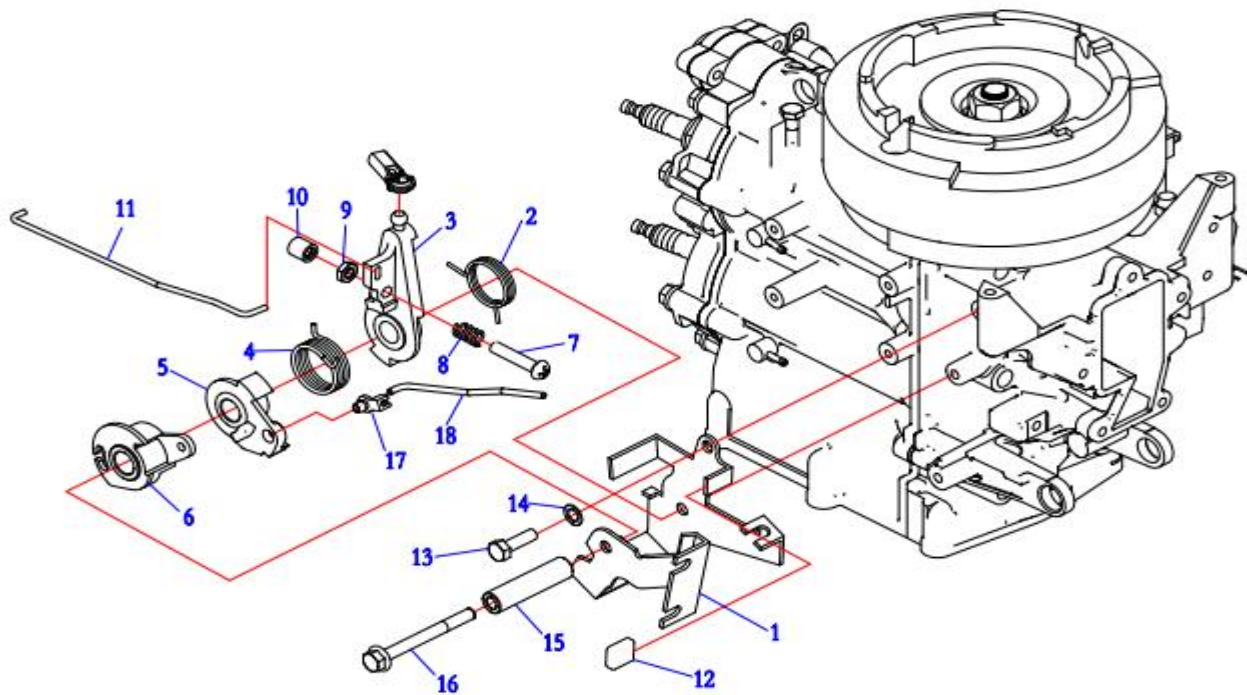


Control system unit

NO.	part No.	Products name	QT
-----	----------	---------------	----


1	T15-01.04.00.09	Mounting rack	1
2	T15-01.04.00.02	Torsional spring A	1
3	T15-01.04.01.01	Magneto control lever	1
4	T15-01.04.00.03	Torsional spring B	1
5	T15-01.04.00.04	Throttle linkage fixing sleeve	1
6	T15-01.04.00.01	Throttle cable end round	1
7	GB/T823	Cross recessed small pan head screwM6	1
8	GB/T6175	Hexagon nutsM6	1
9	T15-01.04.01.02	Compression spring	1
10	T15-01.04.01.03	Cap screw	1
11	T15-01.03.00.09	Connecting rod joint	1
12	T15-01.04.00.07	Choke valve Connecting rod	1
13	T15-01.04.00.10	Rubber stop block	1
14	GB/T9074.14	Hexagon bolt and pain washer assemblyM6*12	1
15	T15-01.04.00.08	Bush	1
16	GB/T5789	Hexagon bolt with flangeM6*65	1
17	T15-01.04.00.05	Choke Connecting rod connectors	1
18	T15-01.04.00.06	Throttle Connecting rod	1

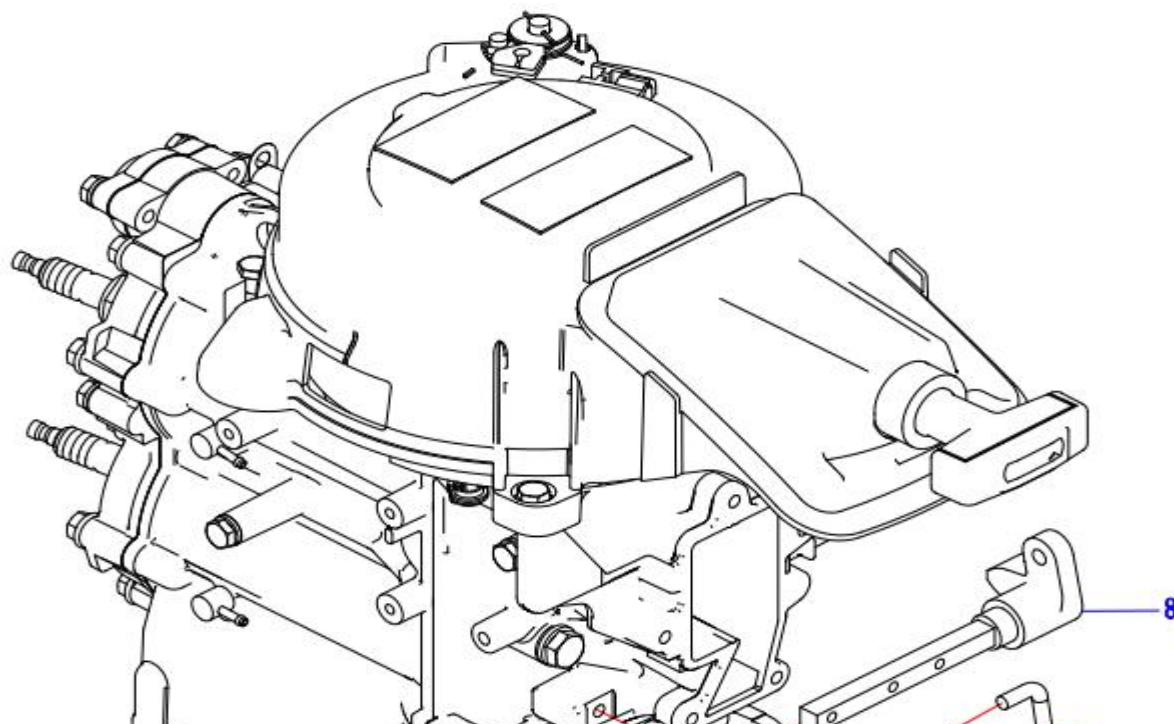

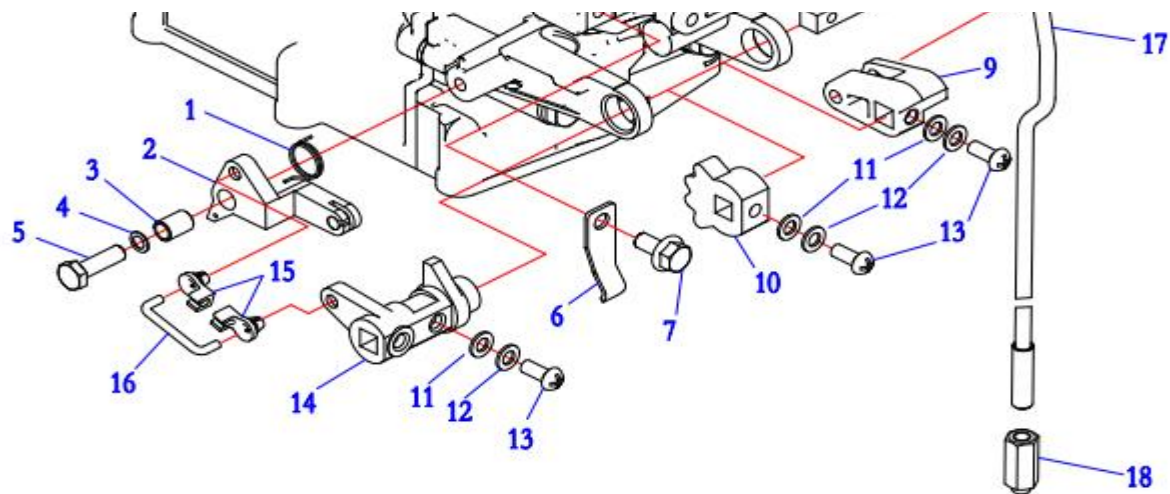

Gear system components


NO.	part No.	Products name	QT
1	T15-01.05.00.06	wire rope pot head torsional spring	1
2	T15-01.05.00.03	wire rope pot head	1
3	T15-01.05.00.04	wire rope pot head gasket pipe	1
4	GB/T97.1	flat washers 6	1
5	GB/5783	Hexagonal head bolt M6*20	1
6	T15-01.05.00.07	gear shifting limit spring plate	1
7	GB/T5789	Hexagon flange bolts M6*12	1
8	T15-01.05.01.00	gear shifting lever components	1
9	T15-01.05.00.02	gear shifting connecting rod fixed bl	1
10	T15-01.05.02.00	gear shifting locking block component	1
11	GB/T93	Spring washer 5	3
12	GB/T97.1	flat pad 5	3
13	GB/T823	Cross recessed small pan head screw M5*12	3
14	T15-01.05.00.01	gear shifting rocker	1
15	T15-01.04.00.05	choke connecting rod joint	2
16	T15-01.05.00.05	rocker lever	1
17	T15-01.05.00.09	columnar nut	1
18	T15-01.05.00.08	gear shifting connecting rod	1

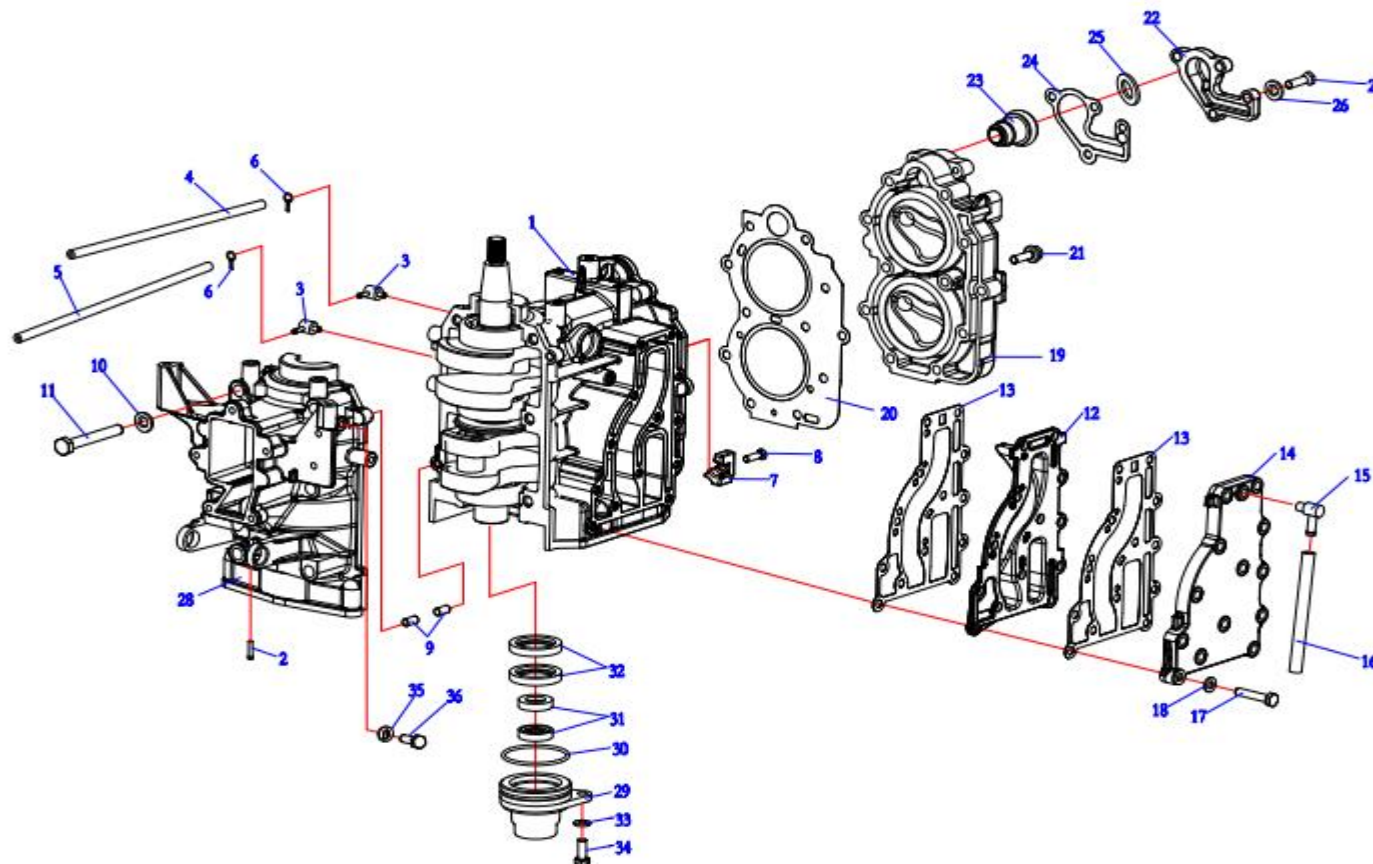


Engine system unit

NO.	part No.	Products name	QT
1	T15-01.06.01.01	Gearcase body omponent	1
2	T15-01.02.05.05	weasand round joint	1
3	T15-01.06.00.01	weasand round joint A	2
4	T15-01.06.00.02	weasand Ø3*Ø7*220	1
5	T15-01.06.00.02	weasand Ø3*Ø7*220	1
6	T15-01.06.00.03	pipe clamp 7	4
7	T15-01.06.00.15	anode A	1
8	GB/T819.1	Cross recessed countersunk flat head	1
9	T15-01.06.00.16	Locating pin Ø6*12	2
10	GB/T97.1	flat pad 8	6


11	GB/T5783	Hexagon bolt M8*60	6
12	T15-01.06.00.04	Exhaust inner cap	1
13	T15-01.06.00.05	Exhaust head gasket	2
14	T15-01.06.00.06	Exhaust outer cap	1
15	T15-01.06.00.07	Water pipe round splice	1
16	T15-01.06.00.08	Water pipe Ø5*Ø9*310	1
17	GB/T9074.14	Hexagon bolt M6*30	13
18	GB/T97.1	flat pad 6	13
19	T15-01.06.00.09	Cylinder cap	1
20	T15-01.06.00.10	Cylinder gasket	1
21	GB/T5789	Hexagon bolt with flangeM6*35	11
22	T15-01.06.00.11	Thermostat housing	1
23	T15-01.06.00.14	Thermostat	1
24	T15-01.06.00.12	Thermostat housing sealing gasket	1
25	T15-01.06.00.13	Flat washer	1
26	GB/T97.1	flat pad 6	4
27	GB/T5783	Hexagon bolt M6*20	4
28	T15-01.06.00.17	gearcase cover	1
29	T15-01.06.00.18	Oil seal shell	1
30	T15-01.06.00.19	Oil seal shell type O ring	1
31	T15-01.06.00.21	Oil seal 13*25*6	2
32	T15-01.06.00.20	Oil seal 25*38*6	2
33	GB/T97.1	flat pad 6	1
34	GB/T5783	Hexagon bolt M6*16	1
35	GB/T97.1	flat pad 6	1
36	GB/T5783	Hexagon bolt M6*12	1

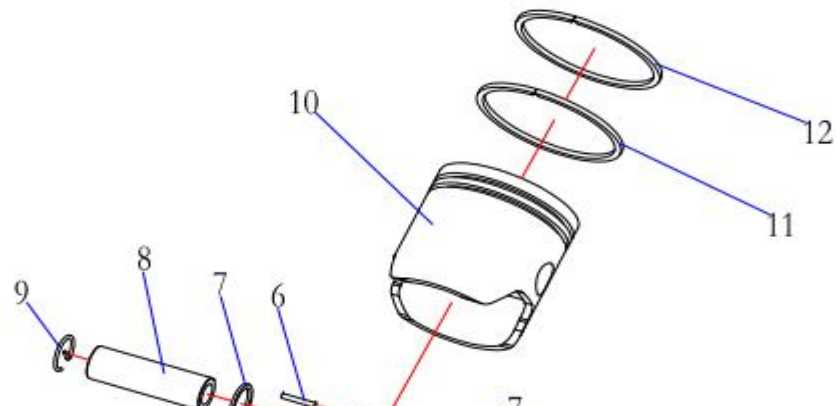


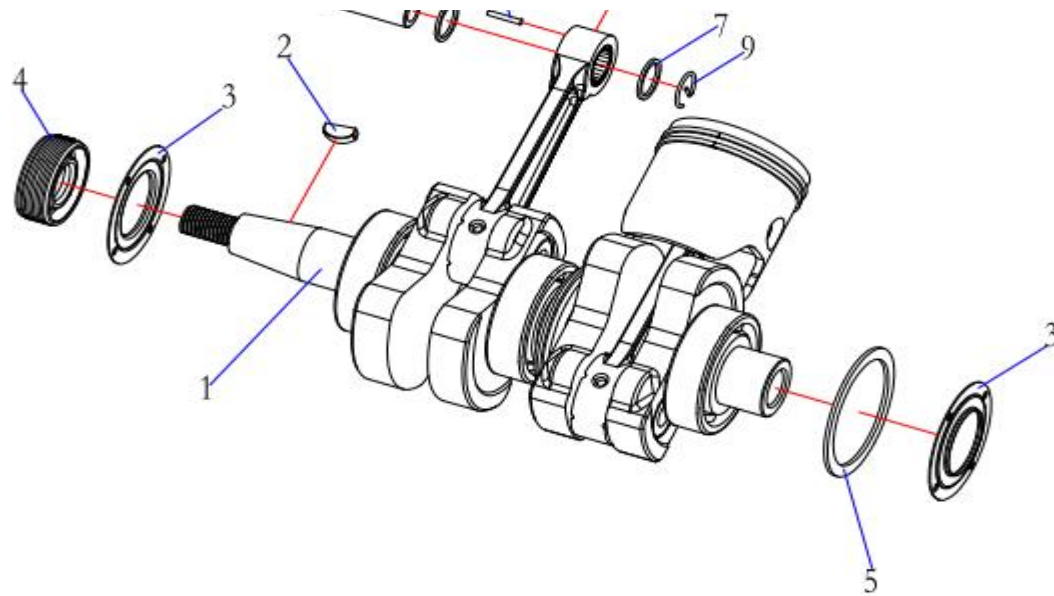

Crank shaft connecting rod piston component

NO.	part No.	Products name	QT
1	T15-01.06.03.00	crankshaft connecting rod component	1
2	T15-01.06.00.32	Woodruff key	1
3	T15-01.06.00.23	bearing cover plate	2
4	T15-01.06.00.22	crankshaft oil 23*36*13	1
5	T15-01.06.00.24	Cover plate Retaining ring	1
6	T15-01.06.00.30	needle bearing	50
7	T15-01.06.00.31	needle cover plate	4
8	T15-01.06.00.28	piston pin	2
9	T15-01.06.00.29	piston pin clamping spring	4
10	T15-01.06.00.25	piston	2
11	T15-01.06.00.27	Deputy gas ring	2
12	T15-01.06.00.26	Main gas ring	2

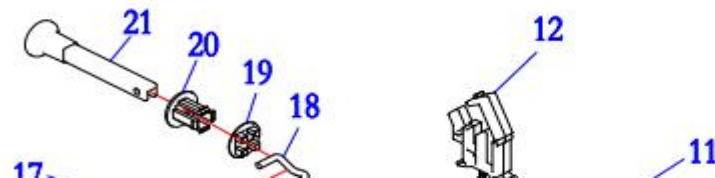


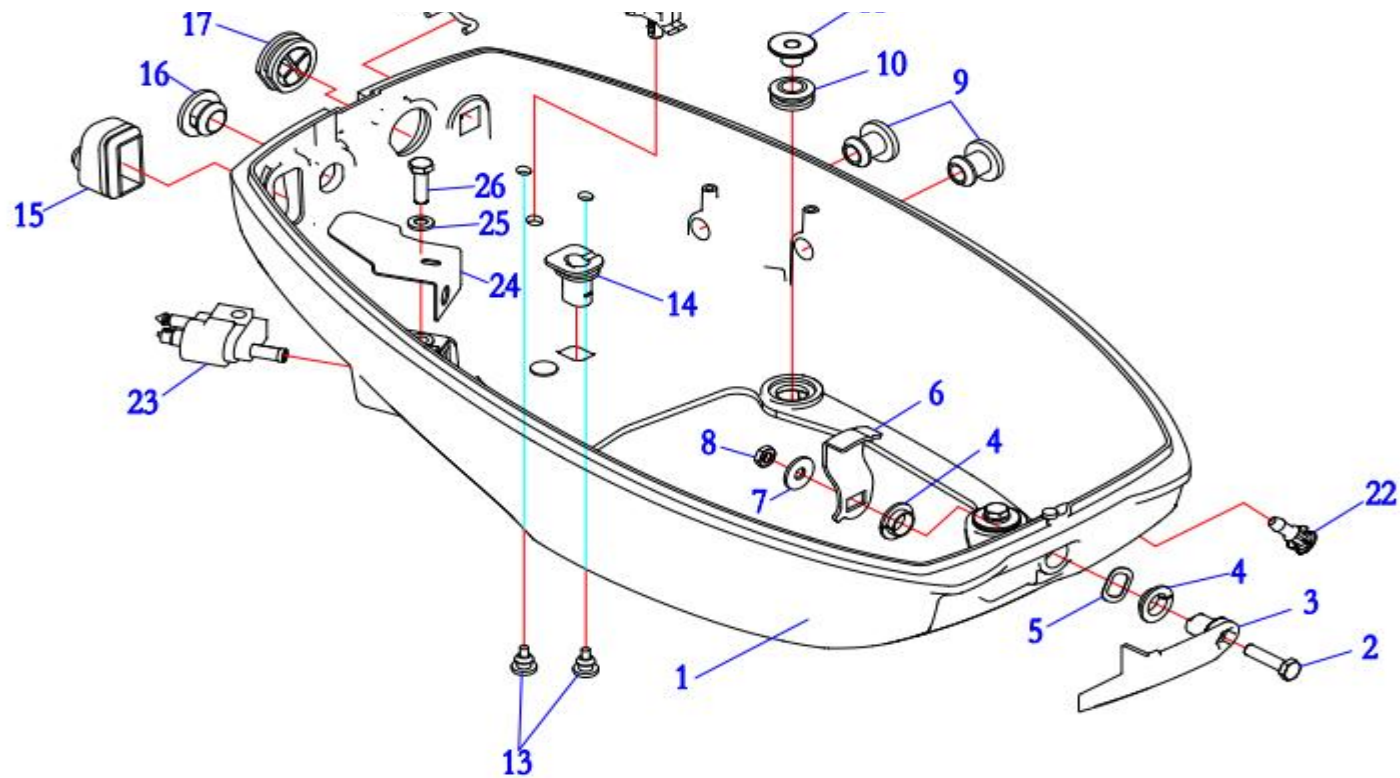


Base Assembly

NO.	part No.	Products name	QT
1	T15-02.00.00.01	Base	1
2	GB/T5783	Hexagon head bolts M6*25	1
3	T15-02.00.00.19	Clamp handle	1
4	T15-02.00.00.18	ring gasket	1
5	T15-02.00.00.17	wave washer	2
6	T15-02.00.00.16	clamp hook	1
7	GB/T97.1	flat gasket 6	1
8	GB/5783	Hexagon thin nut M6	1
9	T15-02.00.00.14	front gear shifting rubber choke plug	1
10	T15-02.00.00.08	base cushion gasket pipe	2
11	T15-02.00.00.07	Base cushion	4
12	T15-02.00.00.06	Throttle cable clamp	4
13	T15-02.00.00.09	base rubber chock plug	1

14	T15-02.00.00.10	gear shifting connecting rod rubber sheath	2
15	T15-02.00.00.05	Handle connecting rod rubber jacket	1
16	T15-02.00.00.13	front operating throttle rubber choke plug(small)	1
17	T15-02.00.00.12	front operating throttle rubber choke plug(big)	1
18	T15-02.00.00.15	choke rocker connecting rod	1
19	T15-02.00.00.04	Rubber gasket	1
20	T15-02.00.00.03	Choker rod jacket	1
21	T15-02.00.00.02	Choker rod	1
22	T15-02.00.00.11	water nozzle	1
23	T15-01.02.04.00	Fuel pipe plug assembly	1
24	T15-01.02.00.06	Fuel pipe plug retaining plate	1
25	GB/T97.1	flat gasket 6	1
26	GB/T5783	Hexagon head bolts M6*20	1

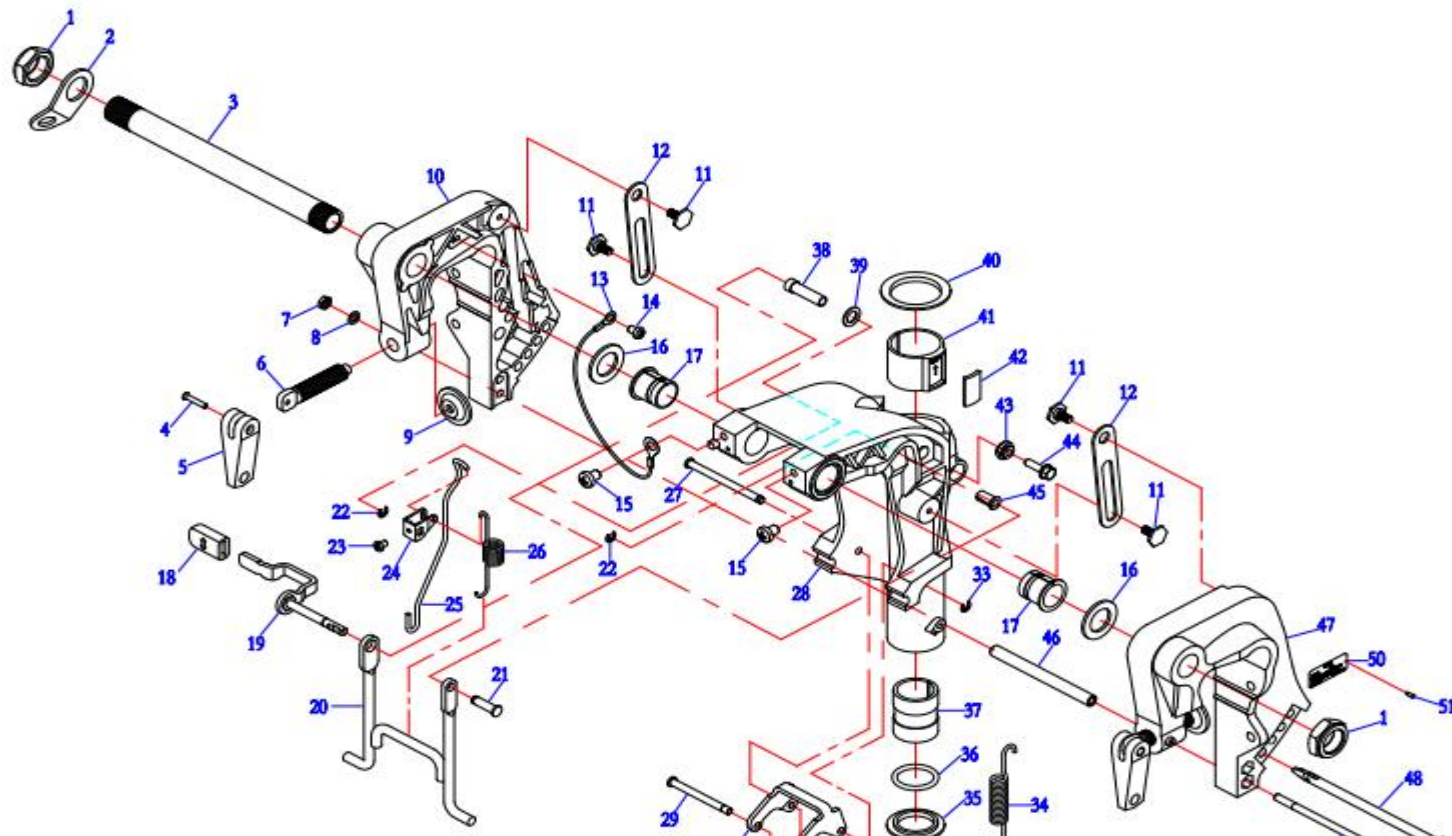


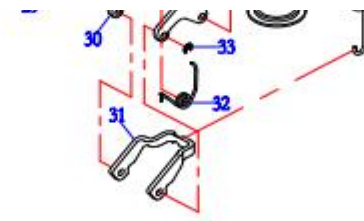


Clamp the bracket assembly

NO.	part No.	Products name	QT
1	T15-03.00.00.01	clamp bracket nut	2
2	T15-03.00.00.03	pore plate	1
3	T15-03.00.00.04	clamp bracket nut stud	1
4	GB/T1015	Countersunk head half blind rivet Ø4*22	2
5	T15-03.00.00.36	clamp handle	2
6	T15-03.00.00.34	Stern powder bolts	2
7	GB/T6175	hexagonal nut M6	1
8	GB/T97.1	flat gasket 6	1
9	T15-03.00.00.35	clamp plate	2
10	T15-03.00.01.01	left bracket	1
11	T15-03.00.00.05	homalocephalus bolts	4
12	T15-03.00.00.06	drive flap	2
13	T15-03.00.03.00	wire rope component	1
14	GB/T823	Cross recessed small pan head screws M6*8	1
15	GB/T818	Cross recessed countersunk head screws M8*10	2
16	T15-03.00.00.02	nylon gasket	2
17	T15-03.00.00.08	Bracket damping ring	2
18	T15-03.00.00.19	locating handle rubber sleeve	1
19	T15-03.00.04.00	Control lever component	1
20	T15-03.00.07.00	Angle support frame components	1
21	T15-03.00.00.23	support frame pin	1
22	GB/T896	split washer 5	2
23	GB/T823	Cross recessed small pan head screws M5*6	1
24	T15-03.00.00.16	angle location	1

25	T15-03.00.00.18	angle location lock rod	1
26	T15-03.00.00.17	Angle support frame tension	1
27	T15-03.00.00.26	angle location lock shaft	1
28	T15-03.00.00.07	rotate bracket	1
29	T15-03.00.00.29	angle location lock stationay shaft	1
30	T15-03.00.00.28	angle location lock outer support bracket	1
31	T15-03.00.00.27	angle location lock inner support bracket	1
32	T15-03.00.00.30	spring	1
33	GB/T896	split washer 4	2
34	T15-03.00.00.25	tension spring	1
35	T15-03.00.00.12	down bush	1
36	T15-03.00.00.13	o rubber ring	1
37	T15-03.00.00.14	down ring gasket	1
38	T15-03.00.00.20	locating handle bearing bush	1
39	T15-03.00.00.21	nylon gasket ring	1
40	T15-03.00.00.11	ring gasket	1
41	T15-03.00.00.09	clamp ring	1
42	T15-03.00.00.10	clamp ring friction piece	1
43	T15-03.00.00.15	clamp bolts seal ring	1
44	GB/T5789	Six hexagon head bolts with flange M6*20	1
45	T15-03.00.00.24	Support frame pin nylon bush	1
46	T15-03.00.00.31	bushing	1
47	T15-03.00.02.01	right bracker	1
48	T15-03.00.05.00	Angle limiting bolt component	1
49	GB/T5782	hexagon headed bolt M6*145	1
50	T15-03.00.00.33	sticker	1
51	GB/T827	rivet Ø2.5*6	2

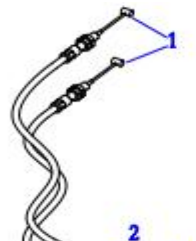


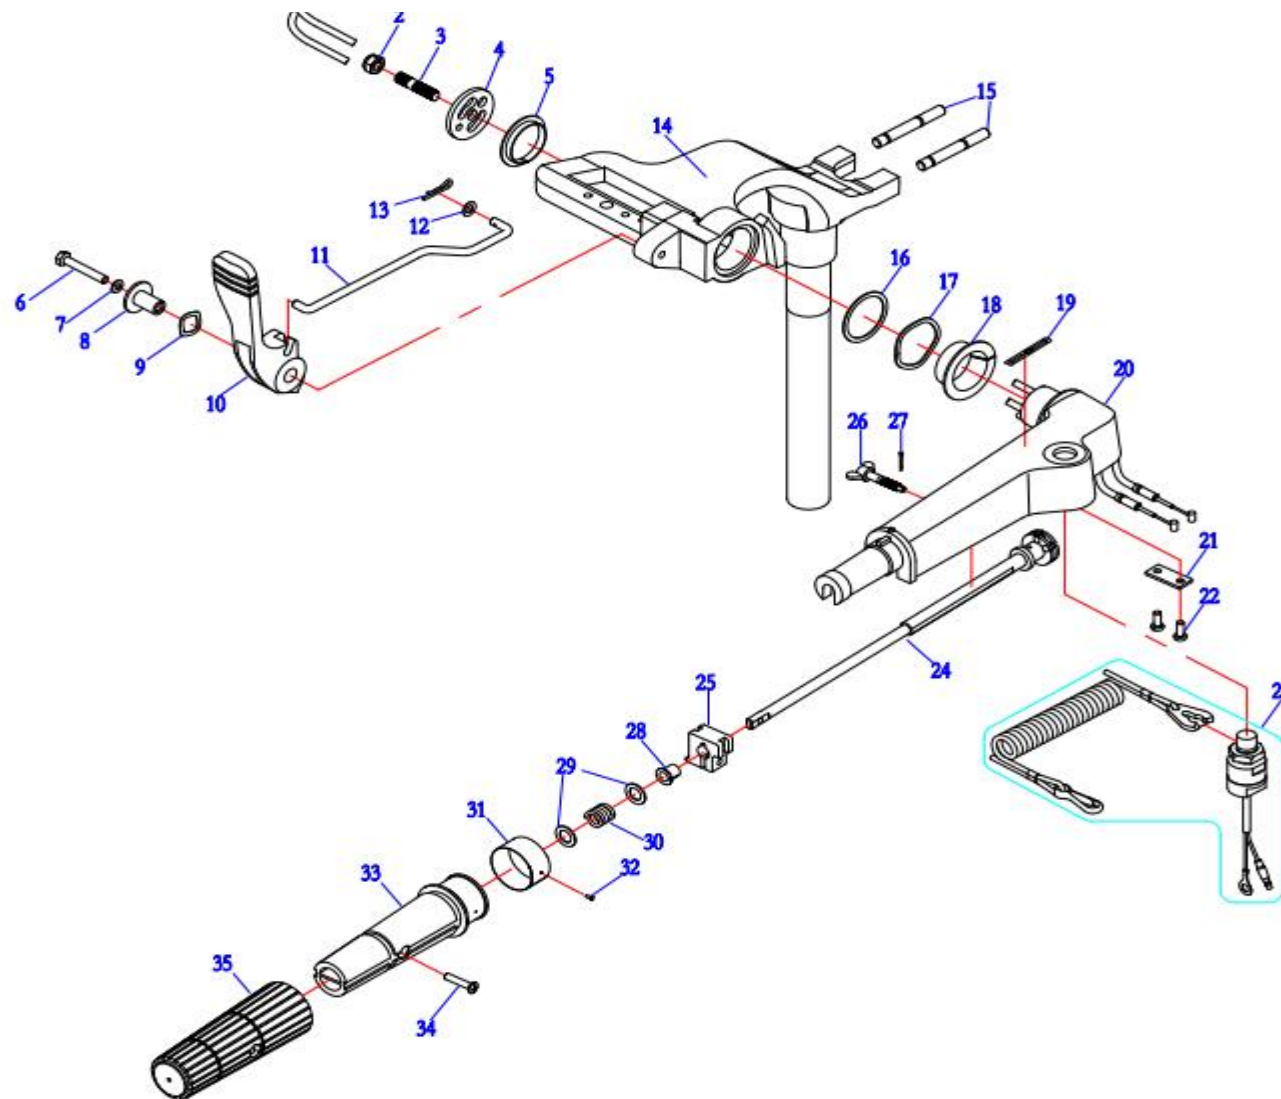


Tiller Assembly

NO.	part No.	Products name	QT
1	T15-04.00.03.00	Throttle control wire components	2
2	GB/T889.1	Type 1 nonmetallic insert hexagon lock nutM8	1
3	T15-04.00.01.02	Stud M8*37	1
4	T15-04.00.00.01	Steering handle pressing plate	1
5	T15-04.00.00.03	Open the nylon bushing(short)	1
6	GB/T5783	Hexagon bolt M6*40	1
7	GB/T97.1	Flat pad 6	


8	T15-04.00.00.15	Shoulder gasket pipe	1
9	T15-04.00.00.16	Shift lever wave washer	1
10	T15-04.00.00.13	Shift lever	1
11	T15-04.00.00.14	Shift lever linkage	1
12	GB/T 97.1	flat gasket 6	1
13	T15-04.00.00.17	Type B pin $\varnothing 1.8 \times 27$	1
14	T15-03.00.06.00	Steering bracket component	1
15	T15-03.00.00.32	Stud M8*66	2
16	T15-04.00.00.02	Nylon washer	1
17	T15-04.00.00.04	Handle wave washer	1
18	T15-04.00.00.05	Opening nylon bushing(length)	1
19	T15-04.00.00.19	Shift instruction label	1
20	T15-04.00.01.01	Steering handle	1
21	T15-04.00.00.06	Throttle lever clamp	1
22	GB/T823	Cross recessed small pan head screwM5*12	2
23	T15-04.00.02.00	Urgent stop switch assembly	1
24	T15-04.00.04.00	Throttle lever components	1
25	T15-04.00.00.07	Latch segment	1
26	T15-04.00.05.00	Resistance tuning knob component	1
27	GB/T91	Cotter $\varnothing 1.6 \times 12$	1
28	T15-04.00.00.09	Lining	1
29	T15-04.00.00.20	Flat washer 10.7*17.8*1	2
30	T15-04.00.00.08	Spring	1
31	T15-04.00.00.12	Accelerator label	1
32	GB/T845	Cross recessed pan head tapping screwsST2.2*5	1
33	T15-04.00.00.10	Handle	1
34	GB/T820	Cross recessed countersunk flat head screwM5*25	1
35	T15-04.00.00.11	Handle rubber	1

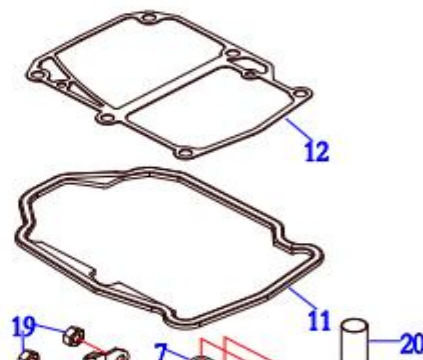


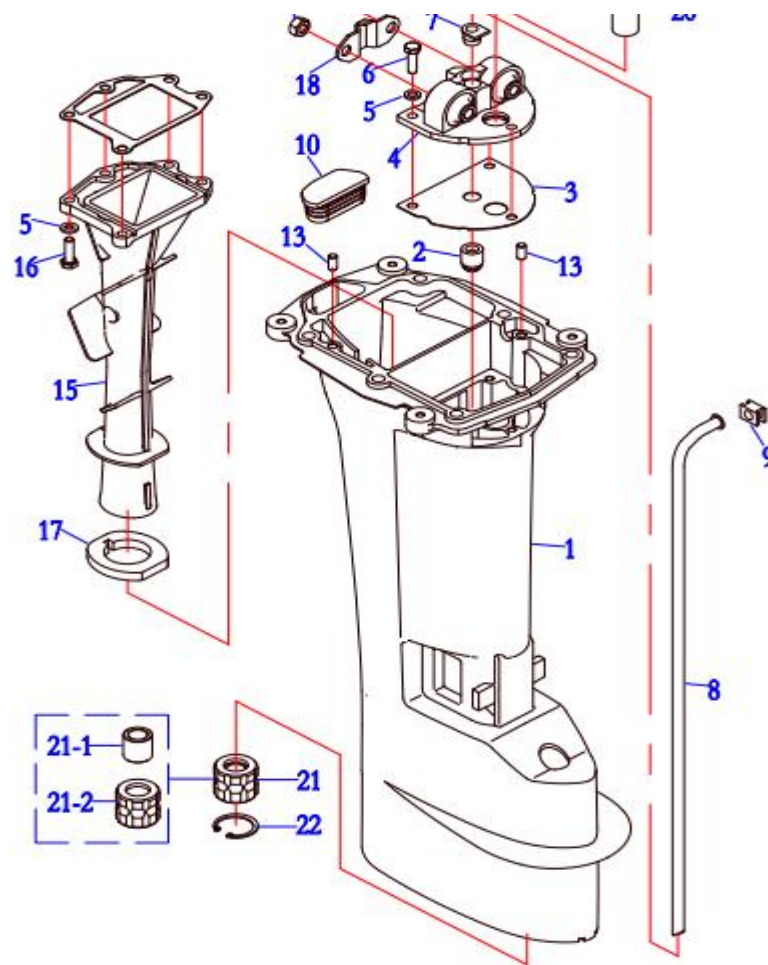

NO.	part No.	Products name	QT
1	T15-05.00.00.01	Water device shell	1
2	T15-05.00.00.06	Water pump cycloidal rubber ring	1
3	T15-05.00.00.05	Shock absorber gasket	1
4	T15-05.00.01.00	Double orifice shock absorber compone	1
5	GB/T 97.1	flat washers6	8
6	GB/T5783	Hexagon bolt M6*18	3
7	T15-05.00.00.09	Water pipe L-type rubber ring	1
8	T15-05.00.00.07	Water pipe	1
9	T15-05.00.00.08	Water pipe bow rubber ring	1
10	T15-05.00.00.04	Idle hole rubber sealing piece	1

11	T15-05.00.00.03	Shell rubber seal	1
12	T15-05.00.00.02	Body gasket	1
13	T15-01.06.00.16	Locating pin06*12	2
14	T15-05.00.00.11	Exhaust pipe sealing packing	1
15	T15-05.00.00.10	Exhaust pipe	1
16	GB/T5783	Hexagon bolt	5
17	T15-05.00.00.12	Exhaust pipe rubber mat	1
18	T15-05.00.00.14	Shock absorber plate	1
19	GB/T6175	Hexagon nuts M8	2
20	T15-05.00.00.13	Nylon bush	1
21	T15L-05.00.02.00	Guide sleeve assembly	1
21-1	T15L-05.00.02.01	Locating sleeve	1
21-2	T15L-05.00.02.02	Damping sleeve	1
22	GB/T893.1	Flexible retaining ring for hole 30	1

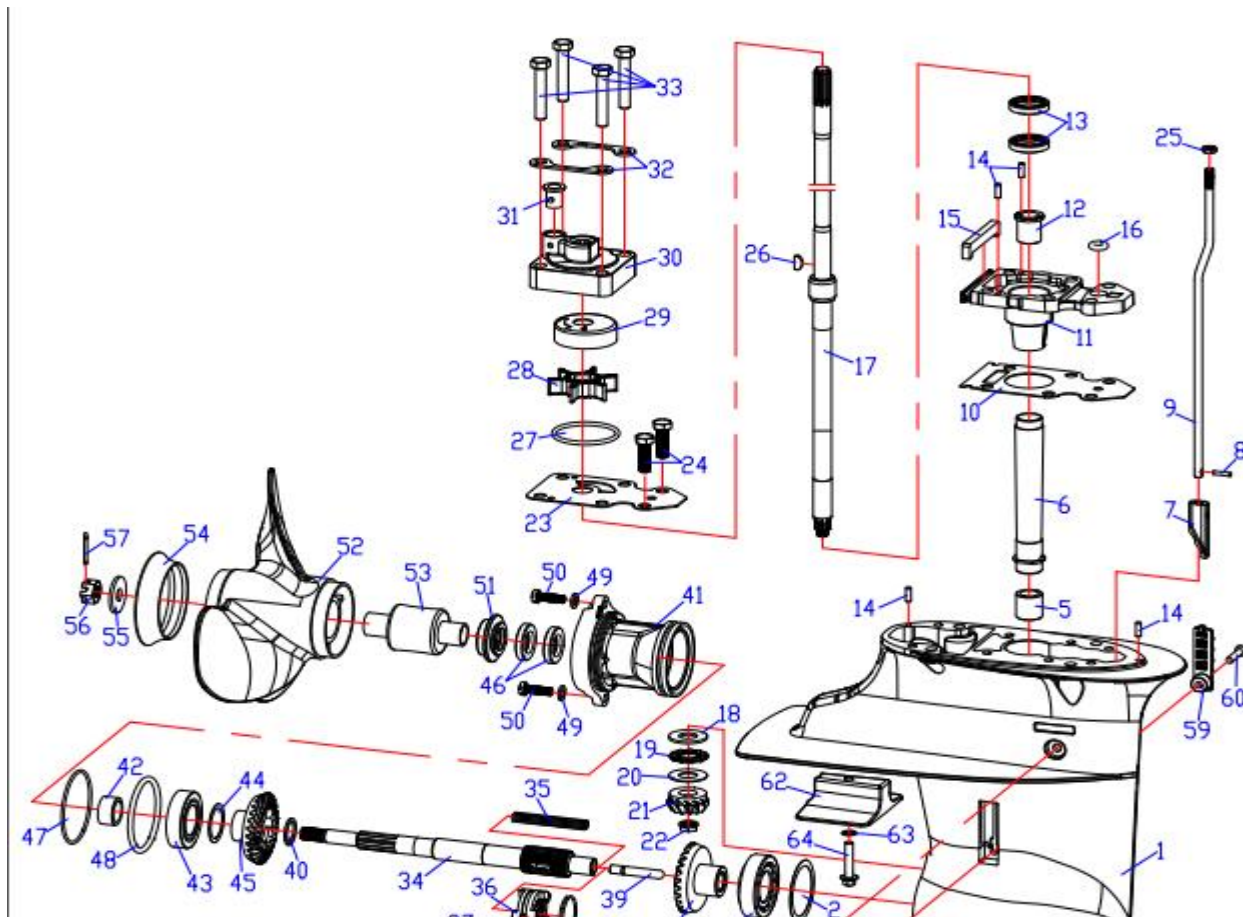


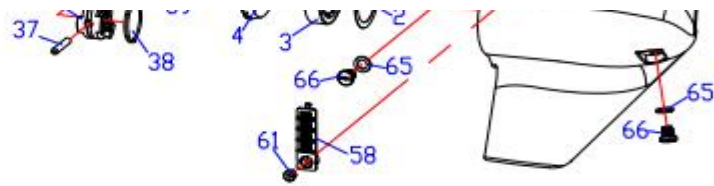

Underwater device

NO.	part No.	Products name	QT
1	T15-06.00.00.01	Underwater shell	1
2	T15-06.00.00.17	Correct gear shim0.1 0.12 0.15 0.18 0.3 0.4 0.5	1
3	T15-06.00.00.16	Conical roller bearing	1
4	T15-06.00.00.18	Correct gear spiral bevel gears	1
5	T15-06.00.00.06	Needle bearingF1420	1
6	T15-06.00.00.07	Nylon ring gasket	1
7	T15-06.00.05.02	Gear shifting cam	1
8	GB/T119.1	Round pin Ø3*14	1
9	T15-06.00.05.01	Gear shifting cam lever	1
10	T15-06.00.00.14	Bearing seal	1
11	T15-06.00.04.01	Bearing carrier	1
12	T15-06.00.04.06	With shelf edge cylindrical bearings	1
13	T15-06.00.04.05	Oil seal 20*30*6	2
14	T15-06.00.00.15	Locating pin Ø4*12	4
15	T15-06.00.04.04	Bearing seat sealing strip	1
16	T15-06.00.04.03	Shift lever type 0 sealing ring	1
17	T15-06.00.00.08	Drive shaft	1
18	T15-06.00.01.02	Shim1.8	1
19	T15-06.00.01.01	Cylindrical roller thrust bearing	1
20	T15-06.00.01.03	Shim1.2	1
21	T15-06.00.00.10	Pinion	1
22	T15-06.00.00.11	Pinion nut	1
23	T15-06.00.04.02	Bearing pressure plate	1
24	GB/T5783	Hexagon boltM8*25	2
25	GB/T6175	Hexagon nutsM6	1
26	T15-06.00.00.09	Drive shaft woodruff key	1
27	T15-06.00.02.02	Pump shell o-rings	1
28	T15-06.00.03.00	Water pump impeller component	1
29	T15-06.00.02.03	Water pump inner	1


30	T15-06.00.02.01	Pump housing	1
31	T15-06.00.00.12	Pump pipe sealing ring	1
32	T15-06.00.00.13	Water pump dead plate	2
33	GB/T5782	Hexagon boltM8*45	4
34	T15-06.00.06.01	Propeller shaft	1
35	T15-06.00.06.05	Compression spring	1
36	T15-06.00.06.02	Claw clutch	1
37	T15-06.00.06.03	Pin 5	1
38	T15-06.00.06.04	Circlip	1
39	T15-06.00.06.06	Shift plunger	1
40	T15-06.00.06.07	Gasket	1
41	T15-06.00.07.01	Underwater shell cover	1
42	T15-06.00.07.07	Neddle bearing17BM2312	1
43	T15-06.00.07.04	Deep groove ball bearing6005	1
44	T15-06.00.07.03	Reverse gear filler piece0.1 0.12 0.15 0.18 0.3 0.4 0.5	1
45	T15-06.00.07.02	Reverse the spiral bevel gears	1
46	T15-06.00.07.08	Oil seal 17*30*6	2
47	T15-06.00.07.06	O-rings(thin)	1
48	T15-06.00.07.05	O-rings(thick)	1
49	GB/T848	Gasket6	2
50	GB/T5783	Hexagon boltM6*20	2
51	T15-06.00.00.19	Bush	1
52	T15-06.00.08.01	Propeller	1
53	T15-06.00.09.00	Propeller internal spline components	1
54	T15-06.00.08.02	Propeller bell mouthing	1
55	GB/T96	Plain washers 10	1
56	T15-06.00.00.20	Hexagon castle nut	1
57	GB/T91	CotterØ2.5*20	1
58	T15-06.00.00.05	Water inlet cover B	1
59	T15-06.00.00.04	Water inlet cover A	1
60	GB/T819.1	Cross recessed countersunk flat head screwM5*22	1
61	GB/T889.1	Type I nonmetal insert hexagon lock nutM4	1
62	T15-06.00.00.21	Anode B	1
63	GB/861.1	Internal teeth lock washer6	1
64	GB/5789	Hexagon flange boltsM6*30	1
65	T15-06.00.00.03	Plug seal	2
66	T15-06.00.00.02	Oil mouth plug	2

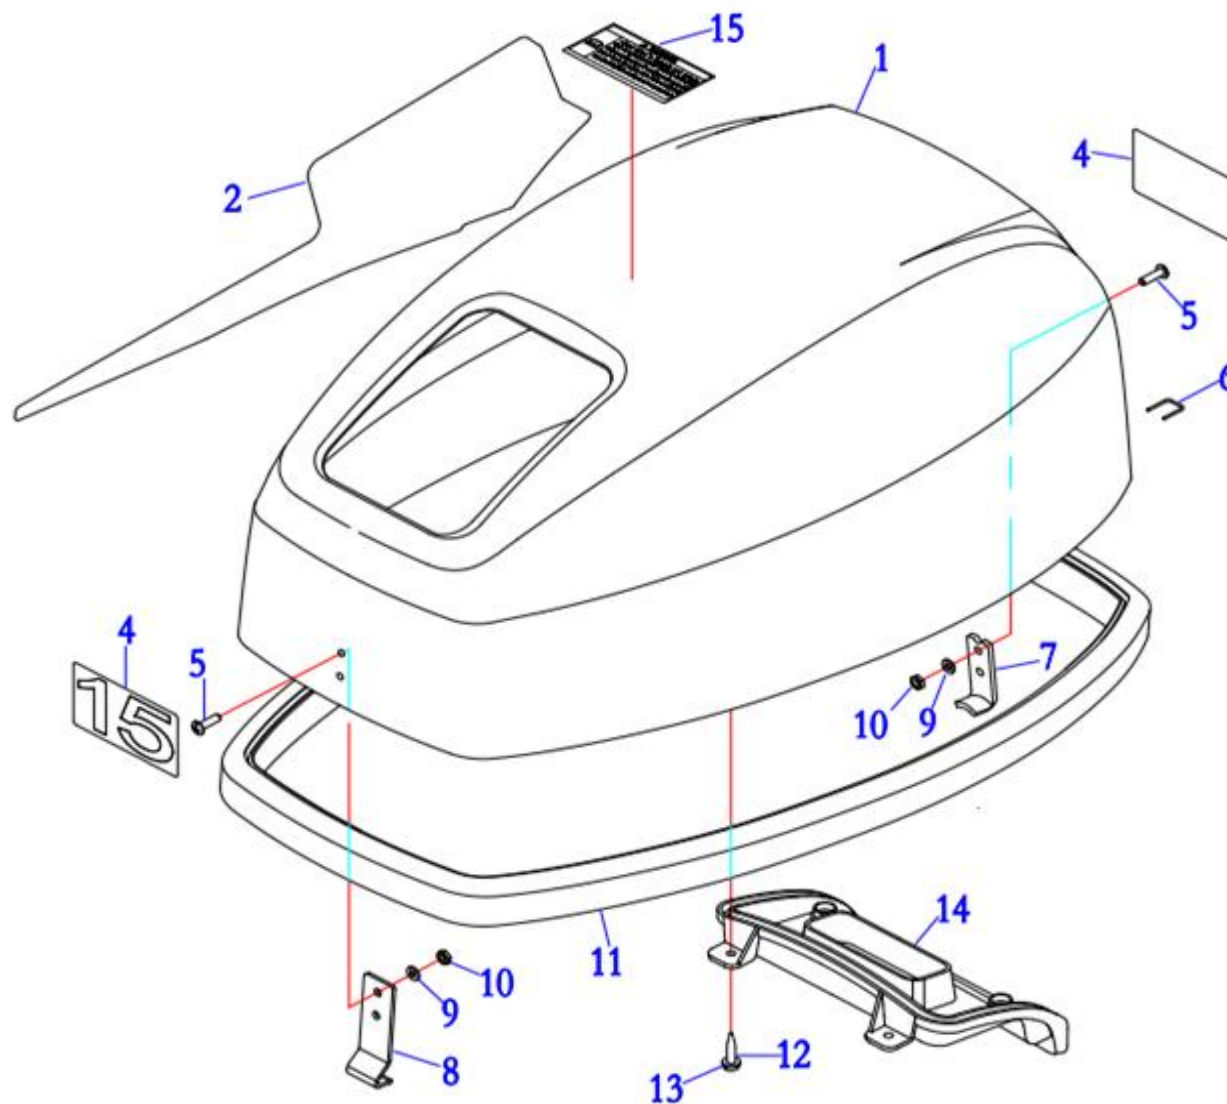

Top Cover Assembly


NO.	part No.	Products name	QT
1	T15-07.00.00.05	cover	1
2	T15-07.00.00.08	Left sticker	1
3	T15-07.00.00.09	Right sticker	1
4	T15-07.00.00.07	sticker	2


5	GB/T823	Cross recessed small pan head screw M4*14	4
6	T15-07.00.00.01	Round nail binding Ø1.2	21
7	T15-07.00.00.03	Rear locking hook	1
8	T15-07.00.00.04	Former locking hook	1
9	GB/T97.1	Flat gasket 4	4
10	GB/T889.1	I type nonmetal insert hexagon lock nut M4	4
11	T15-07.00.00.02	Cap rubber sealing strip	1
12	GB/T9074.18	Cross recessed pan head tapping screwsST3.5*13	4
13	GB/T97.1	Flat gasket 4	4
14	T15-07.00.00.06	Inlet flap	1
15	T15-02.00.00.20	Base label	1

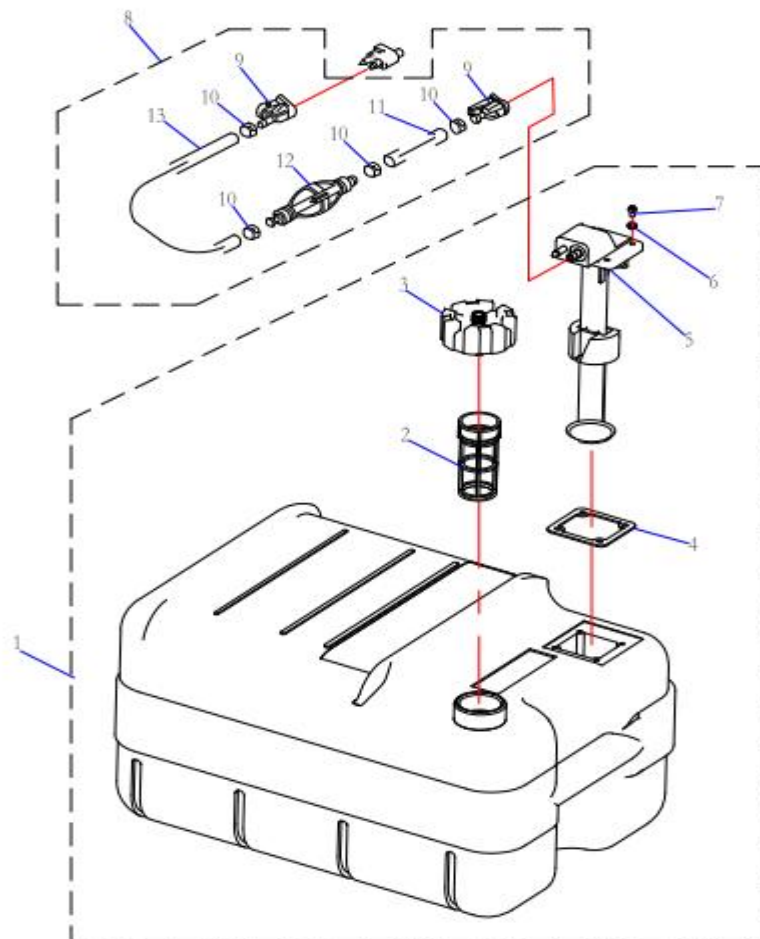

NO.	part No.	Products name	QT
-----	----------	---------------	----

1	T15-08.01.00.01	fuel tank body	1
2	T15-08.01.00.02	oil clearer screen	1
3	T15-08.01.01.00	fuel tank cap component	1
4	T15-08.01.00.03	oil meter gasket	1
5	T15-08.01.02.00	oil meter seat component	1
6	GB/T97.1	flat washer 5	4
7	GB/T818	Cross recessed countersunk head screws M5*16	4
8	T15-08.01.03.00	fuel pipe Check valve component	1
9	T15-08.01.03.08	fuel pipe socket	2
10	T15-08.01.03.22	Clip(small)	2
11	T15-08.01.03.06	fuel pipe B	1
12	T15-08.01.03.05	filling pump shell	1
13	T15-08.01.03.07	fuel pipe B	1

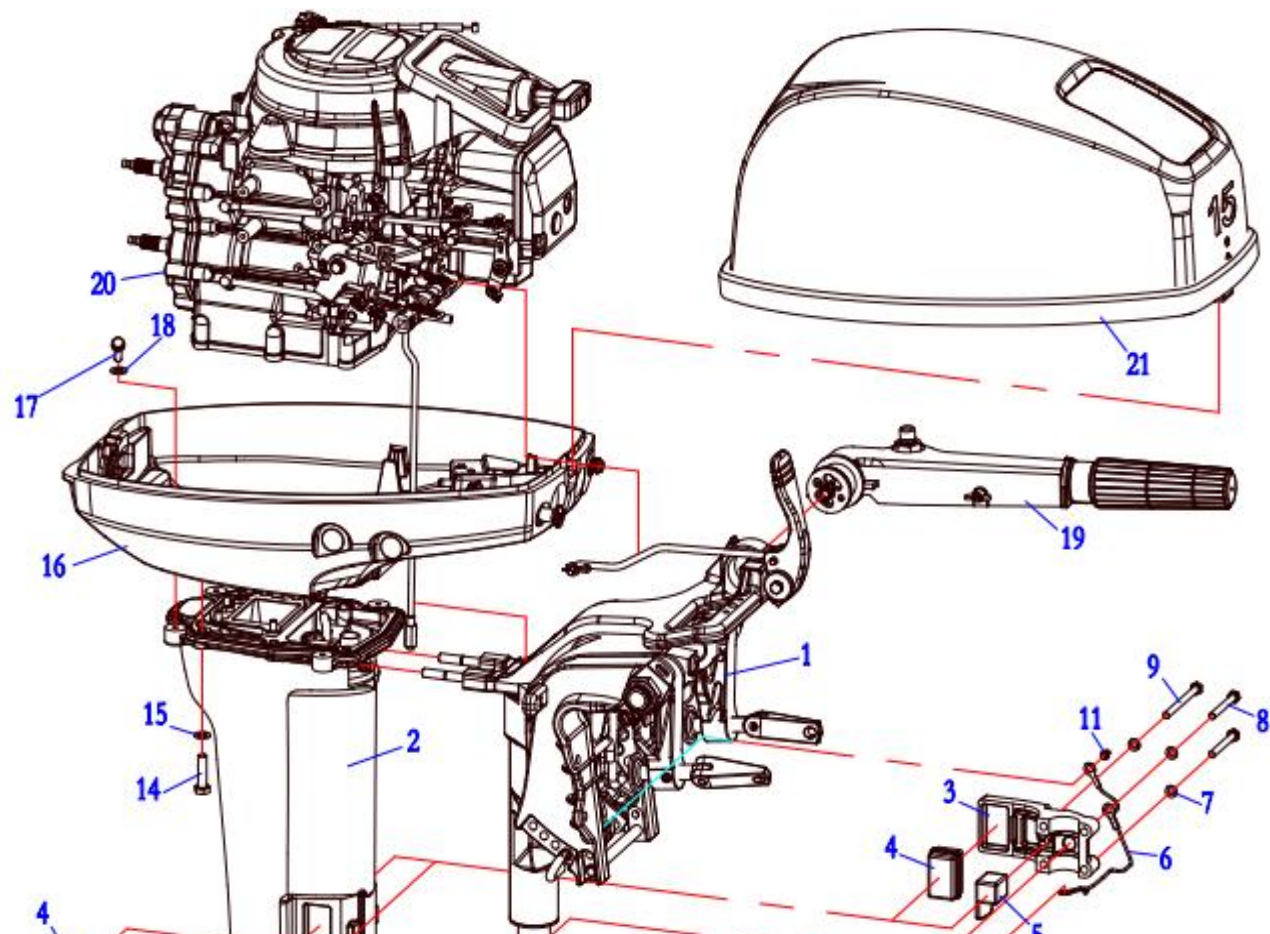

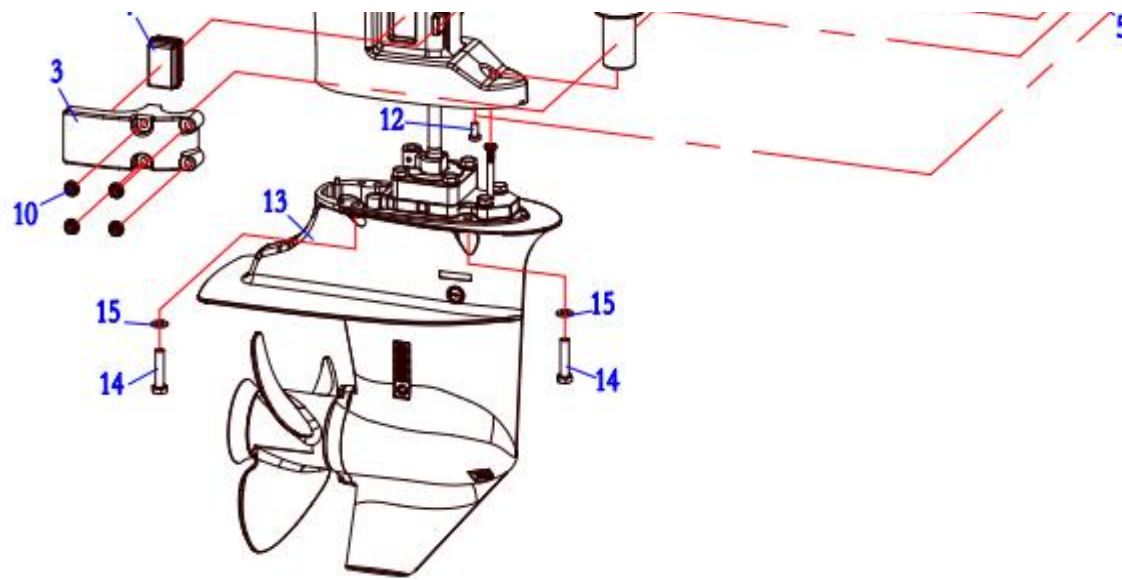

NO.	part No.	Products name	QT
1	T15-03.00.00.00	Clamping bracket assembly	1
2	T15-05.00.00.00	underwater device assembly	1
3	T15-00.00.00.01	Shock absorber housing	2
4	T15-00.00.00.02	Shock absorber block A	2
5	T15-00.00.00.03	Shock absorber block BA	1
6	T15-00.00.01.00	Cable connecting rod assembly	1
7	GB/T97.1	flat pad 6	4
8	GB/T5783	Six headed bolt M6*55	2
9	GB/T5783	Six headed bolt M6*75	2
10	GB/T6177.1	Six angle flange nut M6	4
11	GB/T7940.1	Through pressure injection cup M6	1
12	GB/T823	Cross recessed small pan head screw M6*5	1
13	T15-06.00.00.00	Underwater device assembly	1
14	GB/T5783	Six headed bolt M8*30	10
15	GB/T97.1	flat pad 8	10
16	T15-02.00.00.00	Base assembly	1
17	GB/T5783	Six headed bolt M6*25	4
18	GB/T97.1	flat pad 6	4
19	T15-04.00.00.00	Steering assembly	1
20	T15-01.00.00.00	Engine assembly	1

21	T15-07.00.00.00	Top cover assembly	1
----	-----------------	--------------------	---