
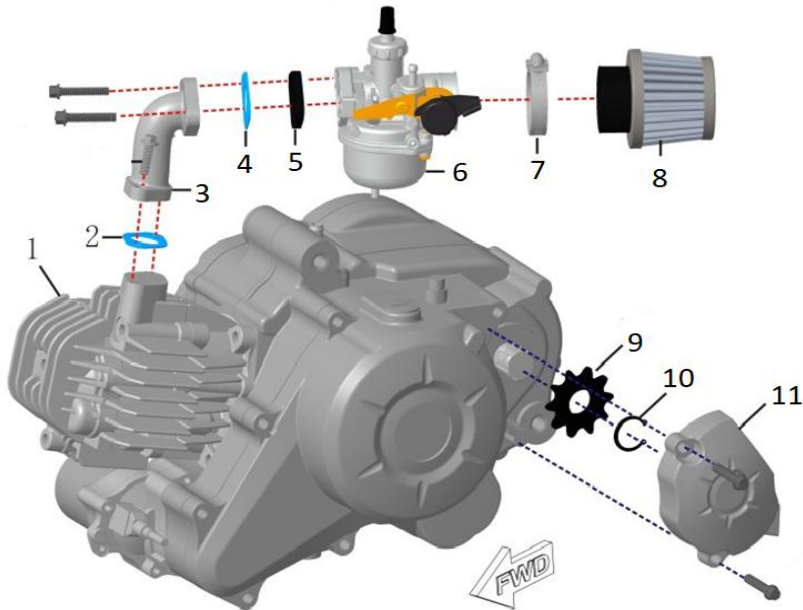
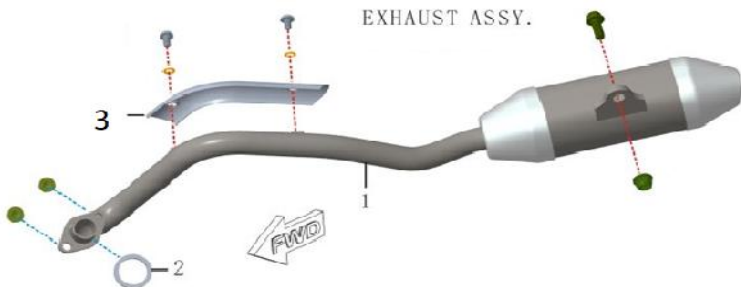
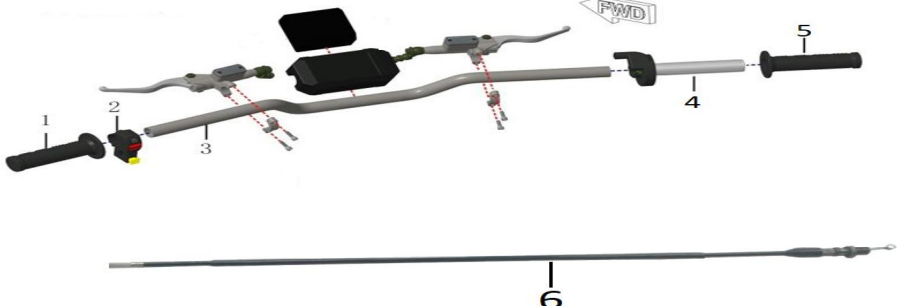
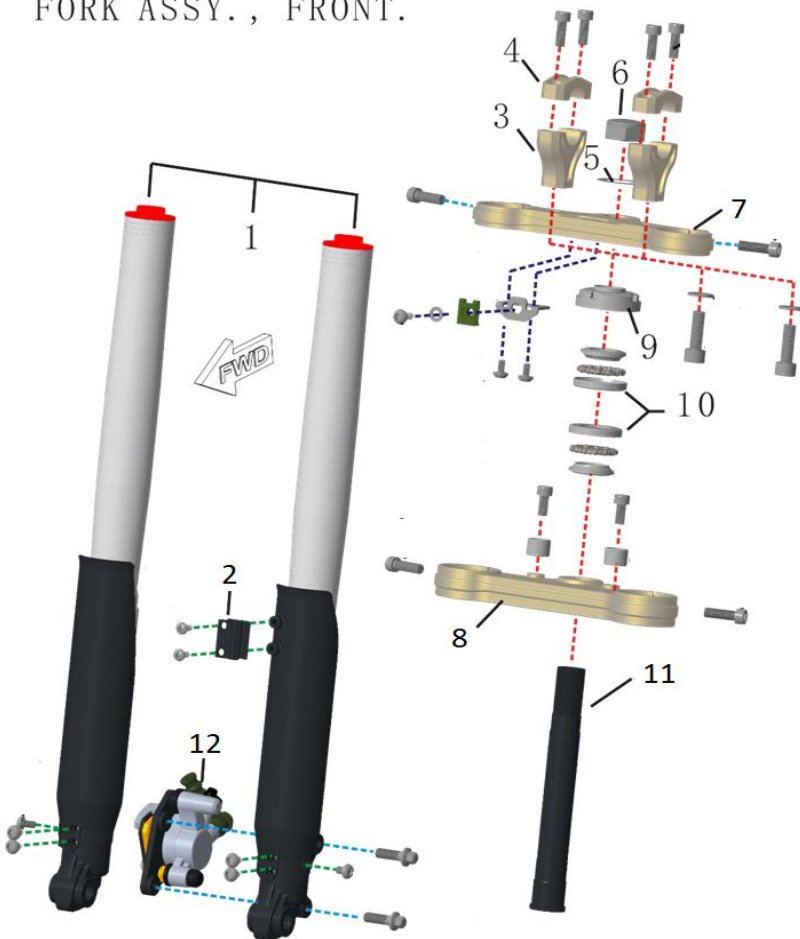
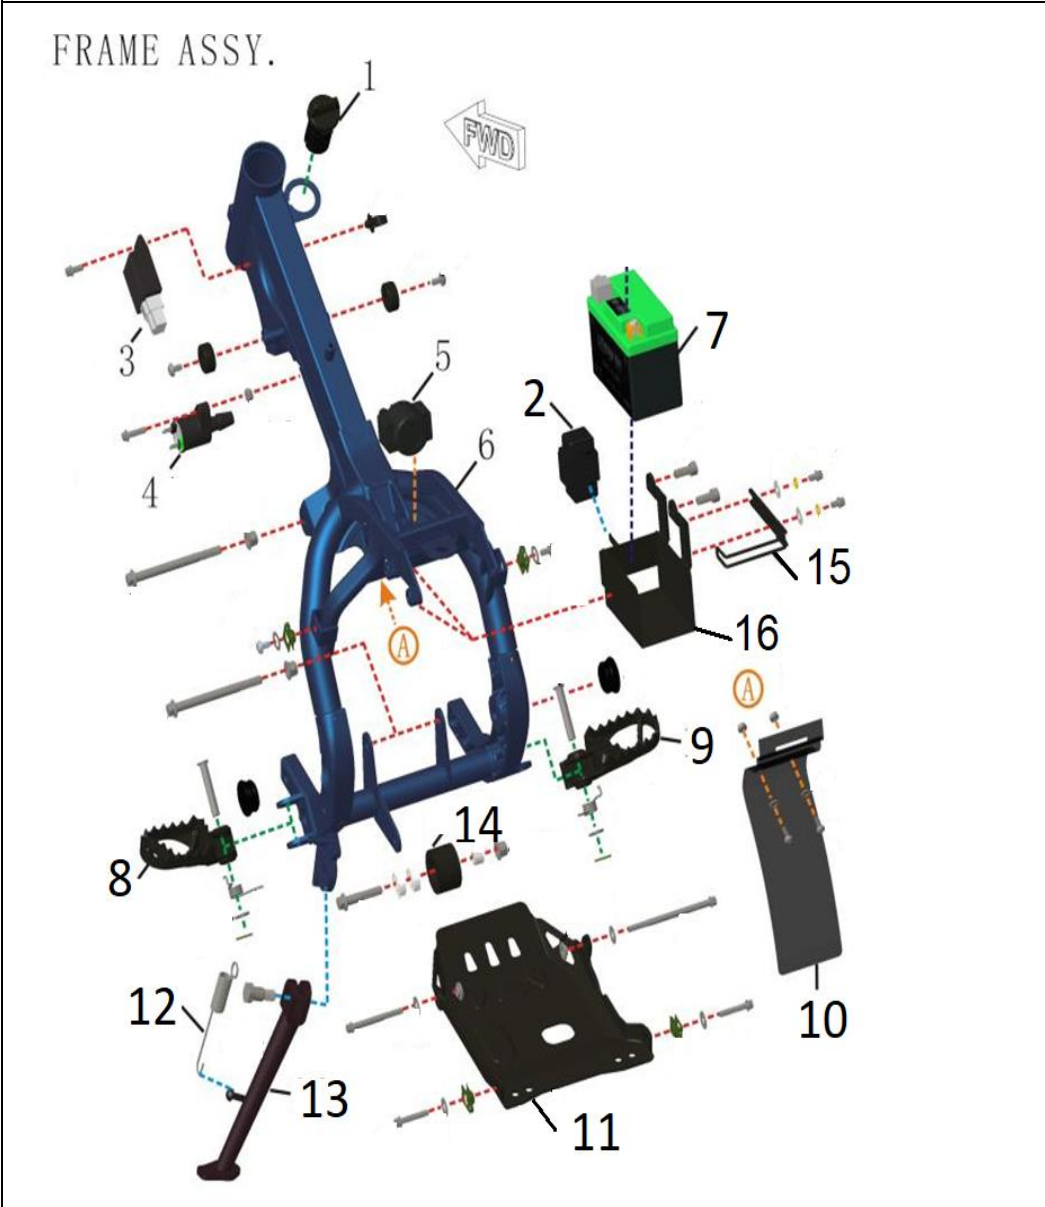
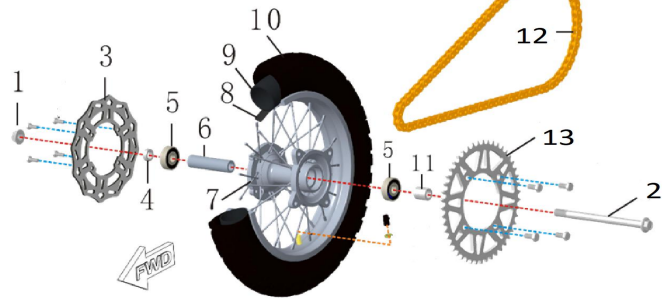


ENGINE, CARBURETOR AND AIR FILTER ASSY. 	REF. No.			DESCRIPTION	Required quantity
	ДВИГАТЕЛЬ, КАРБЮРАТОР И ВОЗДУШНЫЙ ФИЛЬТР В СБОРЕ				
	FRT.1-1	FRZ90E	FRT.1-1_FRZ90E	engine W90CC	1
	FRT.1-2	FRZ90E	FRT.1-2_FRZ90E	gasket, air intake 1	1
	FRT.1-3	FRZ90E	FRT.1-3_FRZ90E	manifold, air intake	1
	FRT.1-4	FRZ90E	FRT.1-4_FRZ90E	gasket, CARBURETOR	1
	FRT.1-5	FRZ90E	FRT.1-5_FRZ90E	spacer, (composite plastic)	1
	FRT.1-6	FRZ90E	FRT.1-6_FRZ90E	carburetor PZ19	1
	FRT.1-7	FRZ90E	FRT.1-7_FRZ90E	clamp, filter D32-44	1
	FRT.1-8	FRZ90E	FRT.1-8_FRZ90E	air filter D34	1
	FRT.1-9	FRZ90E	FRT.1-9_FRZ90E	sprocket, engine 420-10T	1
	FRT.1-10	FRZ90E	FRT.1-10_FRZ90E	clamp, drain pipe D20	1
	FRT.1-11	FRZ90E	FRT.1-11_FRZ90E	cover, chain	1
EXHAUST ASSY. 	ВЫПУСКНОЙ СБОР				
	FRT.2-1	FRZ90E	FRT.2-1_FRZ90E	muffler pipe assy.	1
	FRT.2-2	FRZ90E	FRT.2-2_FRZ90E	seal, exhaust	1
	FRT.2-3	FRZ90E	FRT.2-3_FRZ90E	shield, heat, pipe	1
HANDLEBAR ASSY. 	3 HANDLEBAR ASSY				
	FRT.3-1	FRZ90E	FRT.3-1_FRZ90E	grip, LH	1
	FRT.3-2	FRZ90E	FRT.3-2_FRZ90E	stop switch	1
	FRT.3-3	FRZ90E	FRT.3-3_FRZ90E	Steering wheel/600 low steering	1
	FRT.3-4	FRZ90E	FRT.3-4_FRZ90E	housing, throttle, assy.	4
	FRT.3-5	FRZ90E	FRT.3-5_FRZ90E	grip, RH	1
	FRT.3-6	FRZ90E	FRT.3-6_FRZ90E	Gas cable	1
FORK ASSY., FRONT. 	РУЛЬ В СБОРЕ				
	FRT.4-1	FRZ90E	FRT.4-1_FRZ90E	Front shock absorber. Inverted non-adjustable 39-42*530	1
	FRT.4-2	FRZ90E	FRT.4-2_FRZ90E	bracket, brake hose	1
	FRT.4-3	FRZ90E	FRT.4-3_FRZ90E	riser, handle bar, bottom	2
	FRT.4-4	FRZ90E	FRT.4-4_FRZ90E	riser, handle bar, top	2
	FRT.4-5	FRZ90E	FRT.4-5_FRZ90E	flat washer D22.5*D36*0.6	1
	FRT.4-6	FRZ90E	FRT.4-6_FRZ90E	nut, M22*1	1
	FRT.4-7	FRZ90E	FRT.4-7_FRZ90E	Upper connection plate aluminum die casting/155/D39/DK90	
	FRT.4-8	FRZ90E	FRT.4-8_FRZ90E	steering stem,triple clamp 155/D42	1
	FRT.4-9	FRZ90E	FRT.4-9_FRZ90E	locking nut M22*1	1
	FRT.4-10	FRZ90E	FRT.4-10_FRZ90E	Crosshead bearings (24/22.5) (upper/lower) tapered roller	1
	FRT.4-11	FRZ90E	FRT.4-11_FRZ90E	Steering column 191mm.22 With lifting column 136	1
	FRT.4-12	FRZ90E	FRT.4-12_FRZ90E	disc, brake, front, bottom	1
FRONT WHEEL ASSY. 	ПЕРЕДНЕЕ КОЛЕСО В СБОРЕ				
	FRT.5-1	FRZ90E	FRT.5-1_FRZ90E	bolt M12*200	1
	FRT.5-2	FRZ90E	FRT.5-2_FRZ90E	spacer d12*d20*22	1
	FRT.5-3	FRZ90E	FRT.5-3_FRZ90E	front rim bearing 6301-2RS	2
	FRT.5-4	FRZ90E	FRT.5-4_FRZ90E	spacer d12*d17*55	1

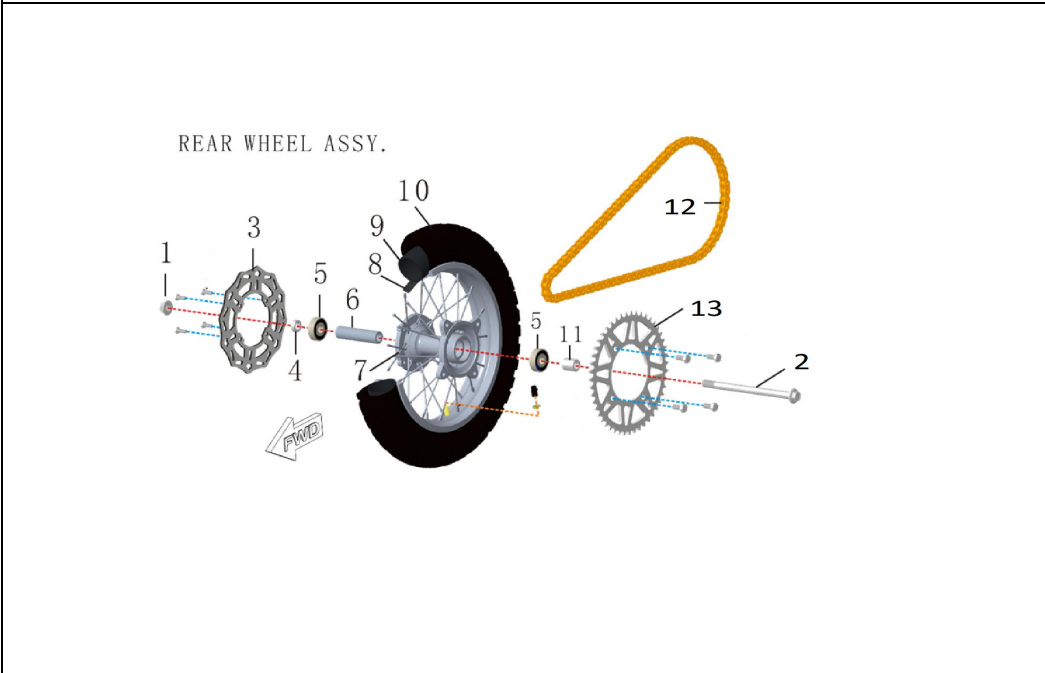


ЗАДНЕЕ КОЛЕСО В СБОРЕ				
FRT.6-1	FRZ90E	FRT.6-1_FRZ90E	nut, flanged, locking M12(1.25)	1
FRT.6-2	FRZ90E	FRT.6-2_FRZ90E	bolt M12*190	4
FRT.6-3	FRZ90E	FRT.6-3_FRZ90E	disc, brake, front d170	1
FRT.6-4	FRZ90E	FRT.6-4_FRZ90E	spacer d12*d20*7	1
FRT.6-5	FRZ90E	FRT.6-5_FRZ90E	front rim bearing 6301-2RS	2
FRT.6-6	FRZ90E	FRT.6-6_FRZ90E	spacer d12*d17*85	1
FRT.6-7	FRZ90E	FRT.6-7_FRZ90E	rim, rear assy. 1.40*10*12 axis	1
FRT.6-8	FRZ90E	FRT.6-8_FRZ90E	inner tube protector band 10R	1
FRT.6-9	FRZ90E	FRT.6-9_FRZ90E	inner tube, 2.50-10R	1
FRT.6-10	FRZ90E	FRT.6-10_FRZ90E	tire, front, 2.50-10R	1
FRT.6-11	FRZ90E	FRT.6-11_FRZ90E	spacer d12*d20*24	1
FRT.6-12	FRZ90E	FRT.6-12_FRZ90E	chain 420-84L	1
FRT.6-13	FRZ90E	FRT.6-13_FRZ90E	sprocket, rear,420-47T	1

[illegible][illegible][illegible]

--



--

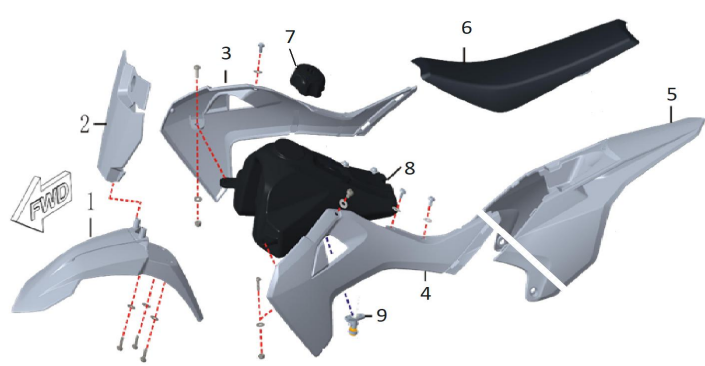

--	--	--

[illegible]

--	--
